

# Bose® S1 Pro Multi-Position PA System

## S1 Battery Pack

 
### Important Safety Instructions

Please read and keep all safety and use instructions.



#### WARNINGS/CAUTIONS:

- This accessory is for use with the Bose S1 Pro Multi-Position PA system only.
- The battery provided with this product may present a risk of fire or chemical burn if mishandled.
- Do NOT expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire, or the like).
- Risk of fire and burns. Do NOT open, crush, heat above 45°C (113°F) or incinerate. Follow manufacturer's instructions.
- Only use genuine Bose batteries with this product. Contact Bose customer service for replacement batteries.

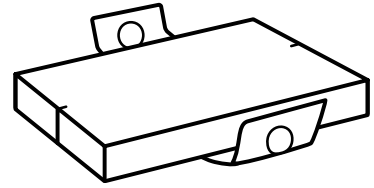

### Regulatory Information

Charging temperature range: 0°C - 42°C (32°F - 108°F)

Discharging temperature range: -20°C - 45°C (-4°F - 113°F)



廢電池請回收

Please dispose of used batteries properly, following local regulations. Do not incinerate.

 


This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health, and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

Li-ion



### Installation Instructions

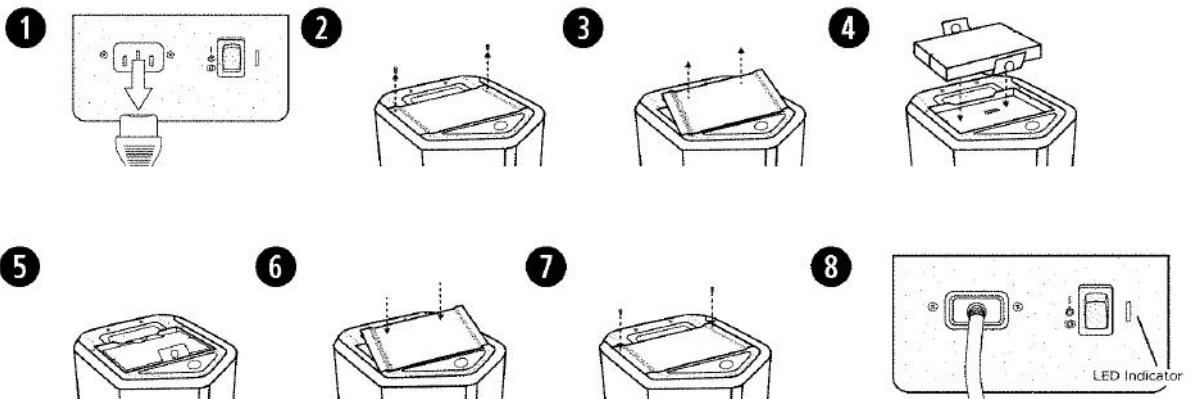

# Installation Instructions

This optional battery is for use when AC power is not readily available.

1. Unplug the S1 Pro and make sure the power is switched to **Standby** (⏻). See Figure 1.
2. Turn S1 Pro upside down; unscrew two screws and remove bottom plate. See Figure 2 and Figure 3.
3. Seat battery into designated holster so connector pins line up appropriately. See Figure 4 and Figure 5.



**CAUTION:** Battery should easily slide into holster. Do NOT force battery into holster. If battery is difficult to insert, rotate 180° before trying again.

4. Replace bottom plate over battery and secure with two screws. See Figure 6 and Figure 7.

## Sleep Mode

Your S1 Pro battery accessory will be shipped in Sleep mode. Your battery will be unusable until woken from Sleep mode. To wake your battery from Sleep mode, plug your S1 Pro into AC power and switch your S1 Pro to **On** (⏻) after proper installation (see “Installation Instructions” above).

**Note:** Your battery will return to Sleep mode if not used for 30 consecutive days.



**CAUTION:** Make sure your battery is fully charged before storing for more than 30 days.

## Charging the Battery

Anytime your S1 Pro is plugged into AC power and the system is not in use, the battery is charging.

## Quick Charge



 
 

 

Though the battery will always charge while your S1 Pro is connected to AC power, Quick Charge enables you to charge your battery more quickly. To enable Quick Charge, place the power switch into the downward position (⏻) when not in use. See Figure 8.

## Battery Life Indicator

The current state of the battery life is shown by the power LED indicator (see Figure 8), which will flash when the unit is powered on. You can also check the battery life by double-clicking the *Bluetooth*® button, which will cause the power LED to flash. See the following table for charge indicators:

**Note:** The LED indicator will flash red when below 10% charge.

**Note:** A sticker depicting the above table is included with your battery pack. For easy reference, it is recommended that you apply this sticker to the bottom plate of your S1 Pro system.

|  X 2 | LED Color |  |
|---|-----------|---|
|  X 4 | Blue      | >75%  |
|  X 3 | Blue      | 50%-75%   |
|  X 2 | Blue      | 25%-49%   |
|  X 1 | Blue      | 10%-24%   |
|  X 1 | Red       | <10%  |

## Additional Information

For more information on the Bose® S1 Pro Multi-Position PA system, refer to the owner's guide available at [www.Bose.com](http://www.Bose.com). To request a printed copy, use the phone numbers provided.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

## Contact Information

Bose Corporation  
Framingham, MA 01701 USA  
Corporate Center: 508-879-7330  
Americas Professional Systems,  
Technical Support: 800-994-2673

## Importer Information

### European Union

Bose Products B.V., Gorslaan 60, 1441 RG Purmerend, The Netherlands

### China

Bose Electronics (Shanghai) Company Limited, Part C, Plan 9, No. 353 North Riyang Road, China (Shanghai) Pilot Free Trade Zone

### Taiwan

Bose Taiwan Branch, 9F-A1, No. 10, Section 3, Minsheng East Road, Taipei City 104, Taiwan  
Tel: +886-2-2514 7676

### Mexico

Bose de México, S. de R.L. de C.V., Paseo de las Palmas 405-204, Lomas de Chapultepec, 11000 México, D.F.  
Tel: +5255 (5202) 3545

## Warranty Information

This product is covered by a limited warranty. For warranty details, visit [pro.Bose.com](http://pro.Bose.com).

The warranty information provided with this product does not apply in Australia and New Zealand. See our website at [www.bose.com/au/warranty](http://www.bose.com/au/warranty) or [www.bose.com/nz/warranty](http://www.bose.com/nz/warranty) for details of the Australia and New Zealand warranty.

©2017 Bose Corporation. All rights reserved.  
Framingham, MA 01701-9168 USA,  
[www.Bose.com](http://www.Bose.com)

All trademarks are the property of their respective owners  
AM801232 Rev. 00  
November 2017



801232-0010